Module

Web Solutions Development

Module Code

IT5035FP

Duration

Lhour

Installation: SQL Server & SSMS

Title:

Installation of SQL Server and SQL Server Management Studio.

Objective(s):

In this lab, students will learn to install SQL Server & SQL Server Management Studio (SSMS).

- Install and configure SQL Server
- Install and configure SQL Server Management Studio

Tools, Equipment and Materials:

- 1 Personal Computer with Internet access
- 2 SQL Server
- 3 SQL Server Management Studio (SSMS)

Instructions:

Part (A): Install and Configure SQL Server


- Download **Microsoft SQL Server 2017 Express** installation file (i.e. SQLServer2017-SSEI-Expr.exe). Download instructions are available in MyConnexion.
- 2 Double-click on the downloaded file to launch the installation process.
- When prompted to select an installation type, click **Basic**.




LABSHEET 5

Module: Web Solutions Development Module Code: IT5035FP

4 Click Accept to accept the License Terms and Privacy Statement.

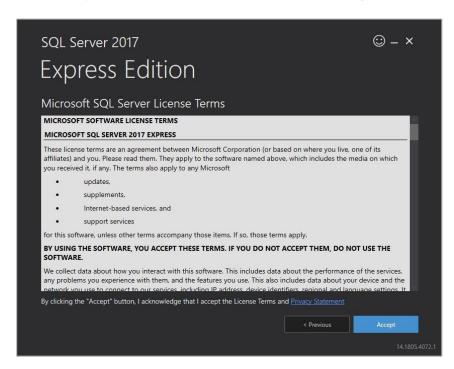

5 Leave the INSTALL LOCATION as default. Click **Install** to start the installation process.

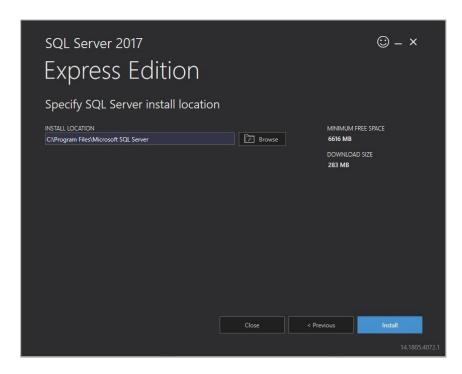


LABSHEET 5

Module: Web Solutions Development

Module Code: IT5035FP

When the installation has completed successfully, leave all settings (e.g. CONNECTION STRING, Folders) as default. Click **Close** to exit SQL Server.

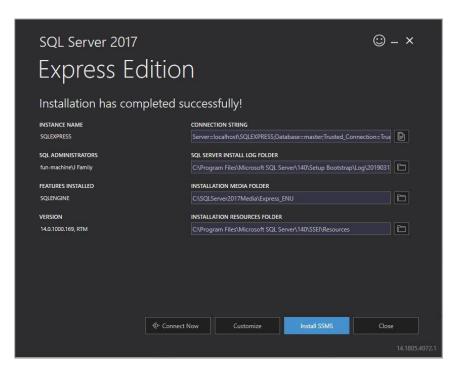


LABSHEET 5

Module: Web Solutions Development Module Code: IT5035FP

Part (B): Install SQL Server Management Studio (SSMS)

- Download **SSMS 17.9.1** installation file (i.e. SSMS-Setup-ENU.exe). Download instructions are available in MyConnexion.
- 2 Double-click on the downloaded file to launch the installation process.
- 3 Click **Install** to start the installation process.

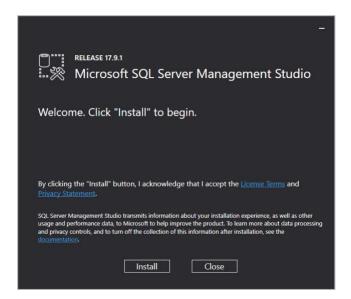

4 When setup is completed, click **Close**.

